

# Retrofit Kit

## Installation Guide



---

## Compatible Products

### Retrofit Kit

RFK-TROFFERS

## Product Warnings


- Install per National Electric Code and Local Codes.
- Installation by a qualified professional.
- Ensure the circuit power is not energized.
- Read fixture markings.
- Drilling, cutting, bending, or modifying the fixture in any way, unless specifically instructed to do so, may result in a voiding the luminaire's warranty, safety listings, or performance certifications.

## Installation Instructions

**1. Shut power off** at control panel.


**2. Remove door frame** from luminaire and set aside for future use.

2

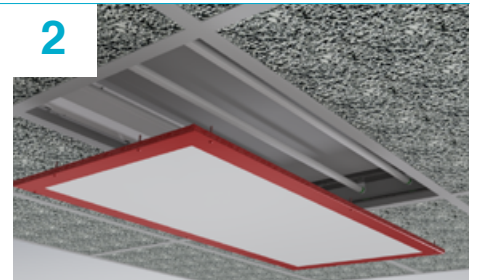


**3. Remove lamps** and discard.

3

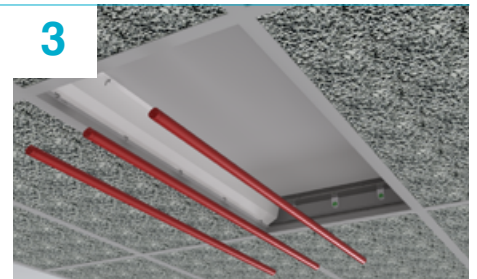


**4. Remove reflectors/ballast covers** and set aside for future use.

4

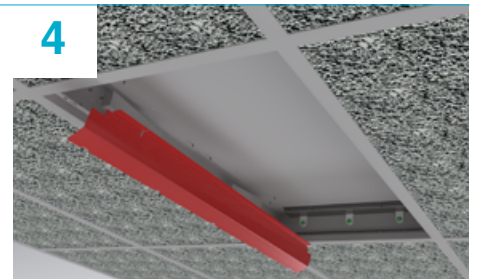


**5. Disconnect luminaire disconnects** on line voltage side of ballasts.


5

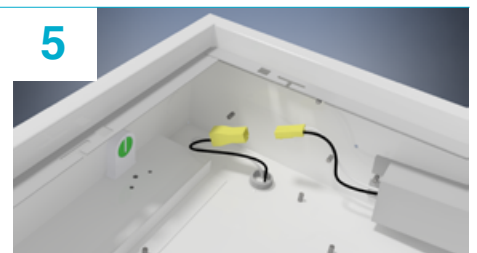


**6. Remove socket holders** and discard.

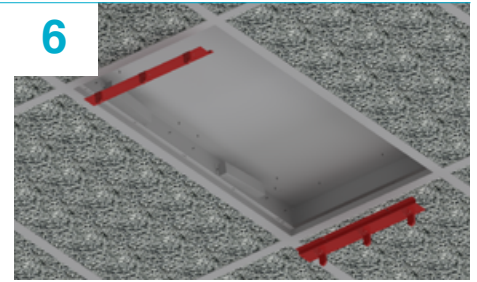


**7. Remove ballast(s)** from luminaire and discard.

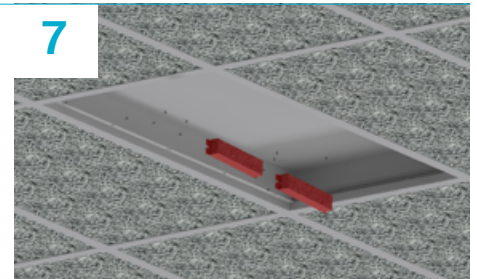

**8. Install** new drivers.

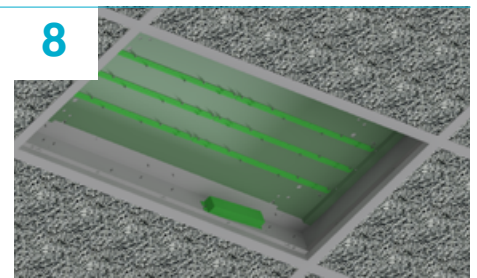

**9. Install** pre-wired LED plate.

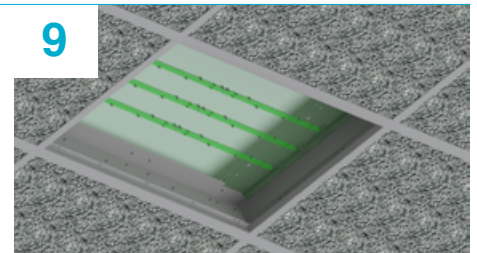


**10. Make connections** from LED to driver.

**11. Connect line voltage disconnects** on driver.




---

### 12. Re-install reflectors.

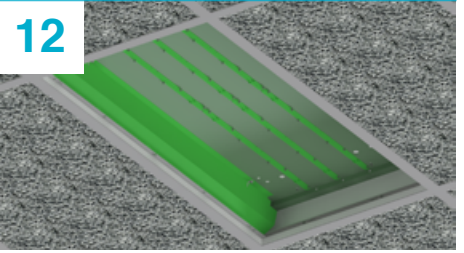

---

### 13. Re-install door frame.

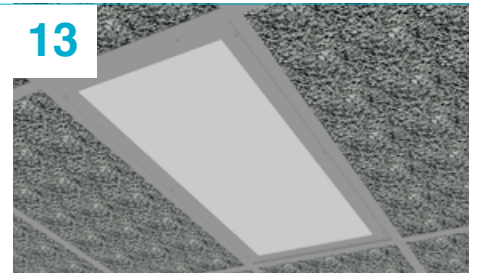

---

### 14. Energize luminaire.